

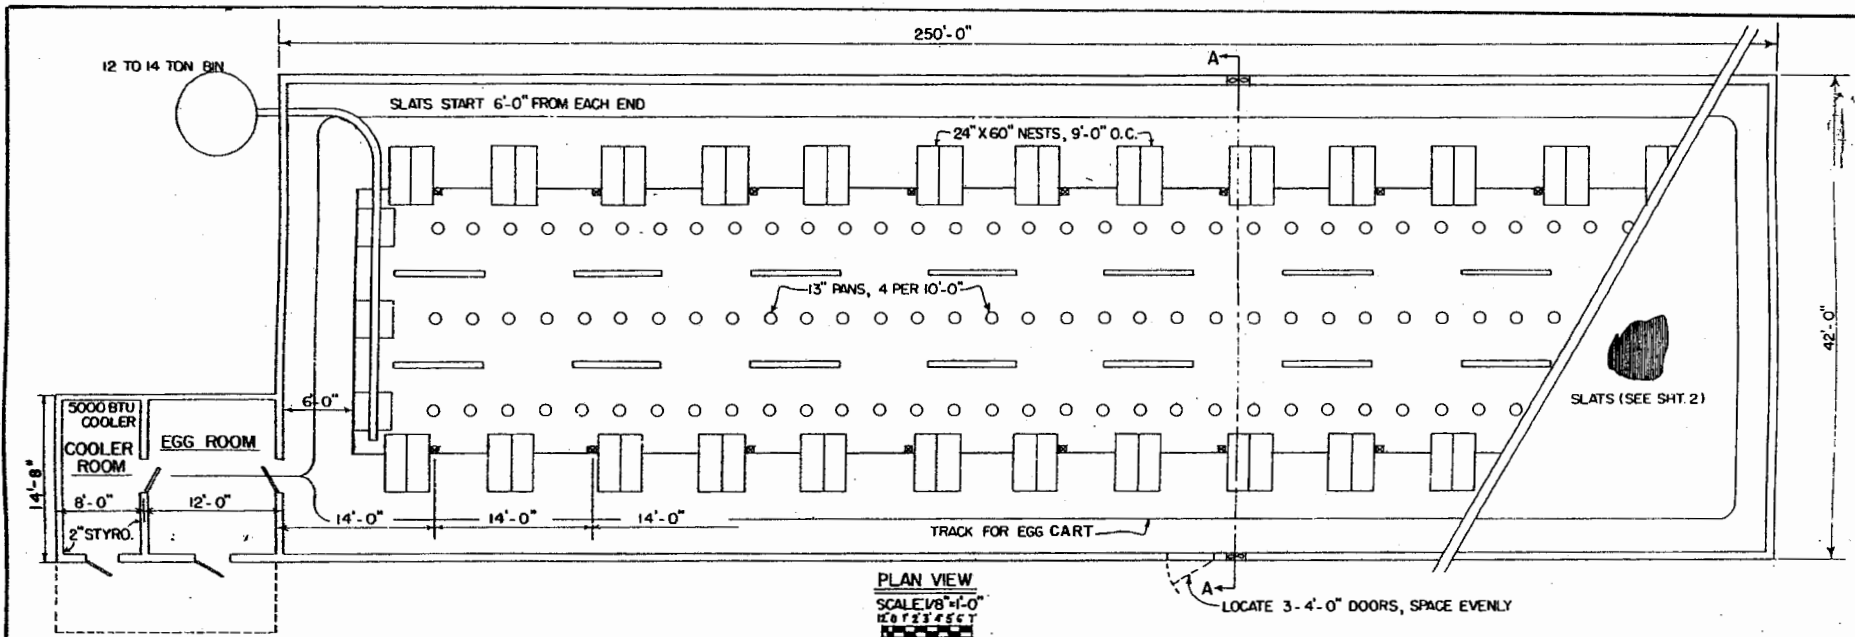


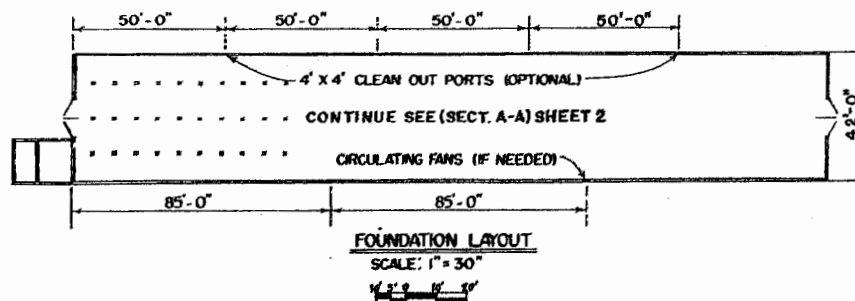

CONSTRUCT LOADING DOCK
(IF DESIRED) & FILL TO LEVEL
REQUIRED FOR TRUCKS

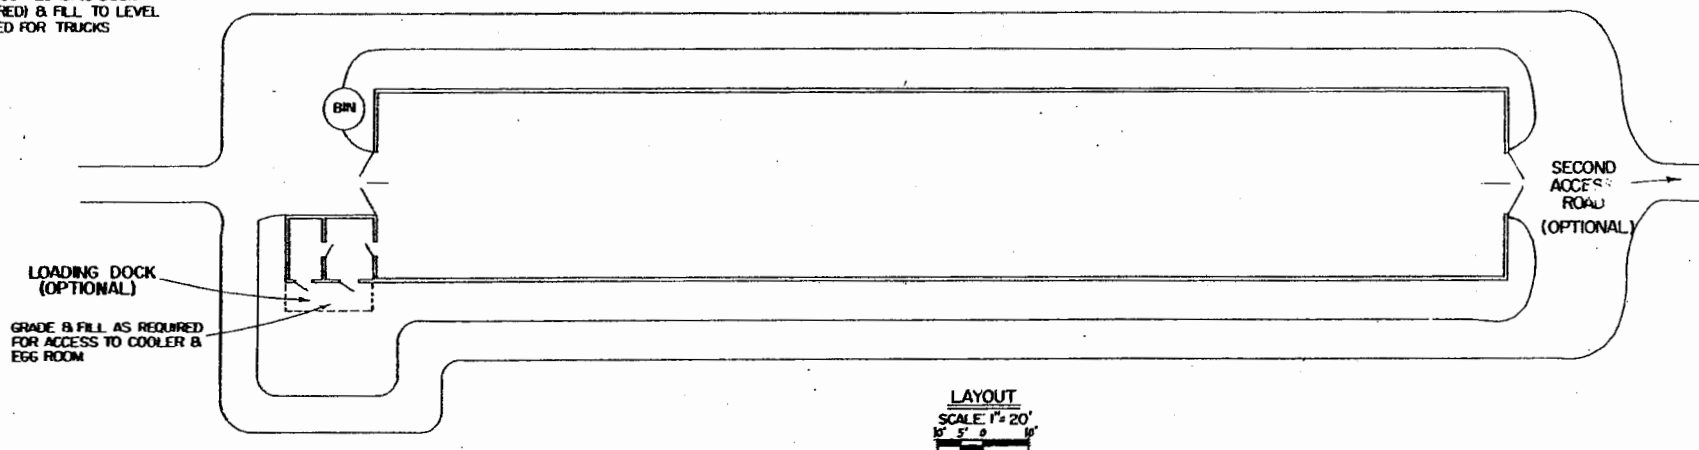


CONSULT LOCAL HEALTH AND BUILDING
CODE AUTHORITIES BEFORE STARTING
CONSTRUCTION.

BASED ON: VPI & SU PLAN NO. F-250




**BROILER BREEDER HOUSE
DEEP PIT**


VA. '75 6235 SHEET 1 OF 3

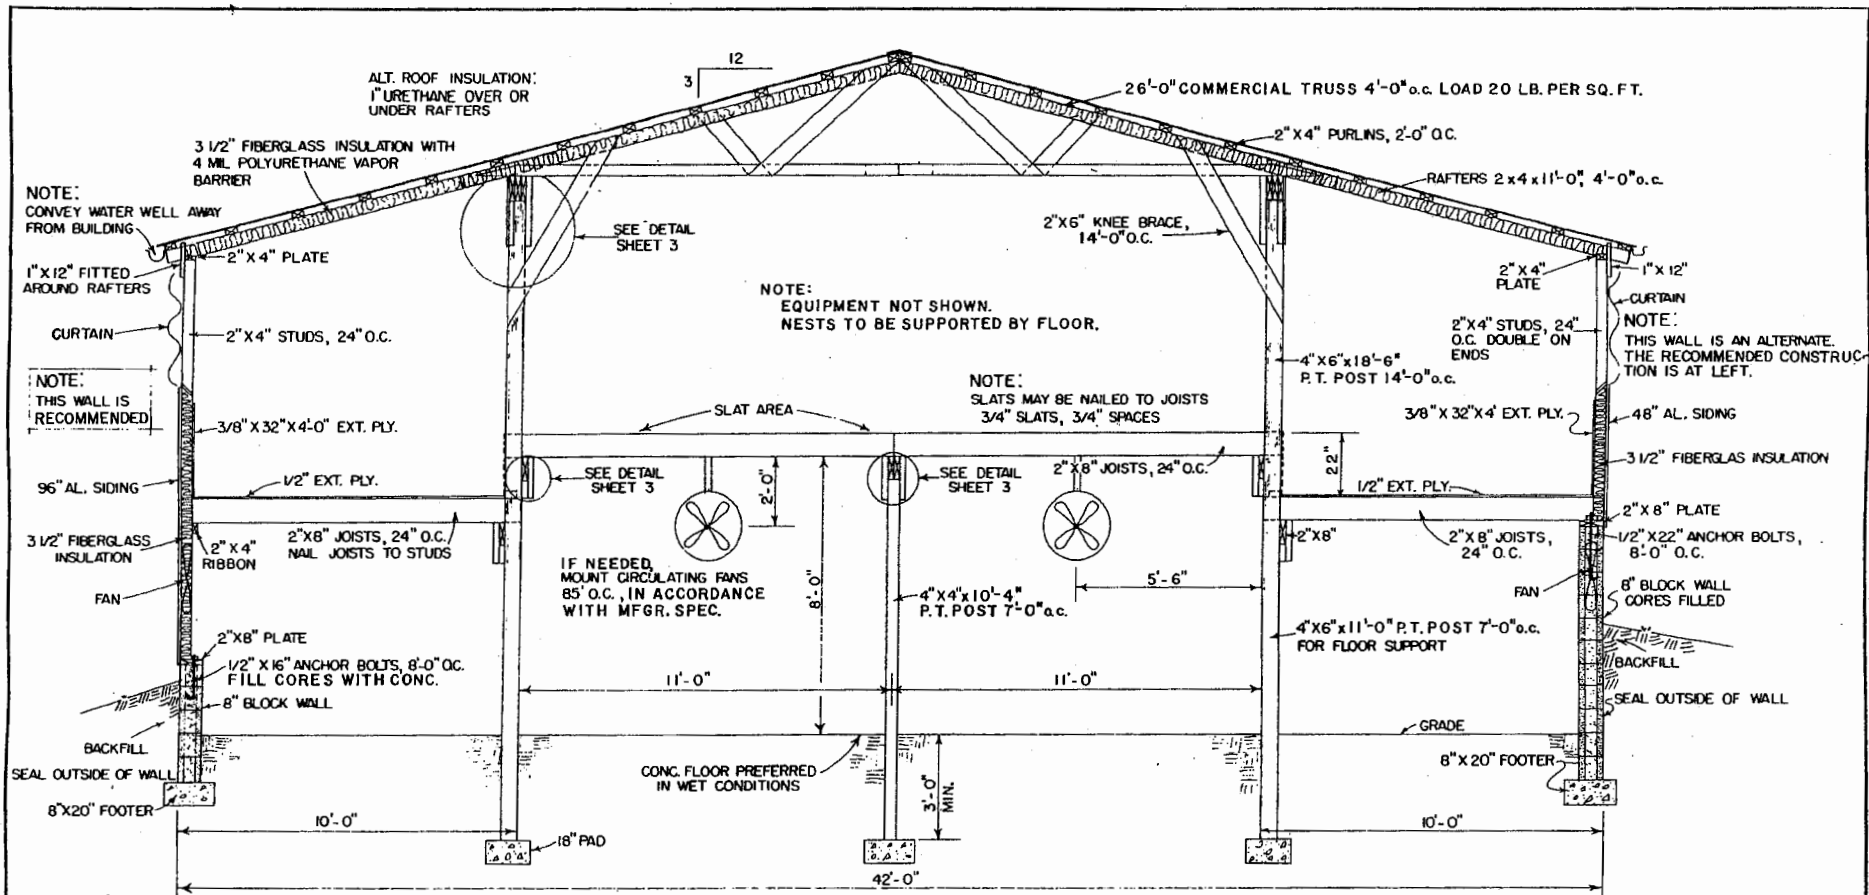

SECTION A-A
SCALE: 3/8" = 1'-0"

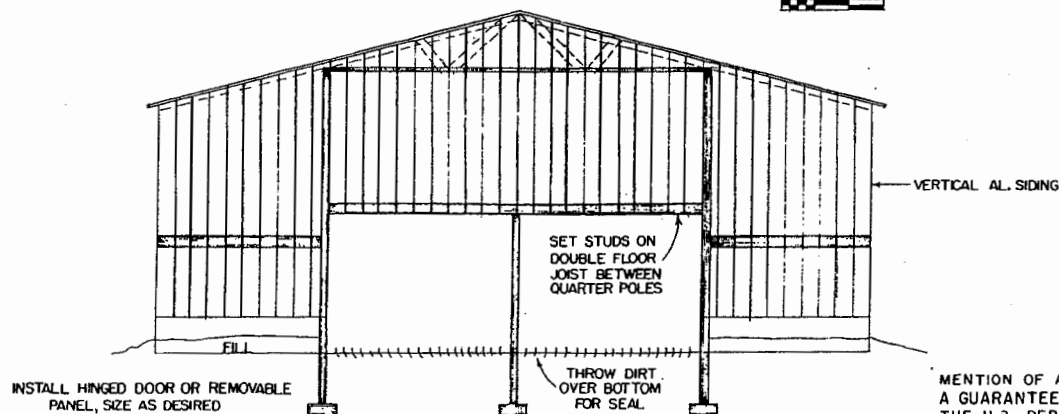

END WALL ELEVATION
SCALE: 3/16" = 1'-0"

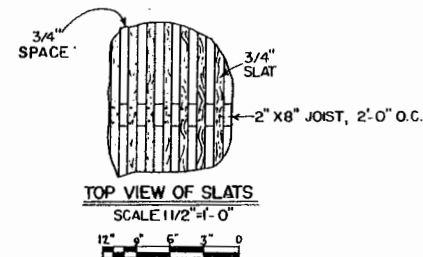


MENTION OF A TRADE NAME DOES NOT CONSTITUTE A GUARANTEE OR WARRANTY OF THE PRODUCT BY THE U.S. DEPARTMENT OF AGRICULTURE OR AN ENDORSEMENT BY THE DEPARTMENT OVER OTHER PRODUCTS NOT MENTIONED.

NOTE: ROUGH LUMBER THRU-OUT UNLESS OTHERWISE INDICATED




BROILER BREEDER HOUSE
DEEP PIT

VA. '75 6235 SHEET 2 OF 3

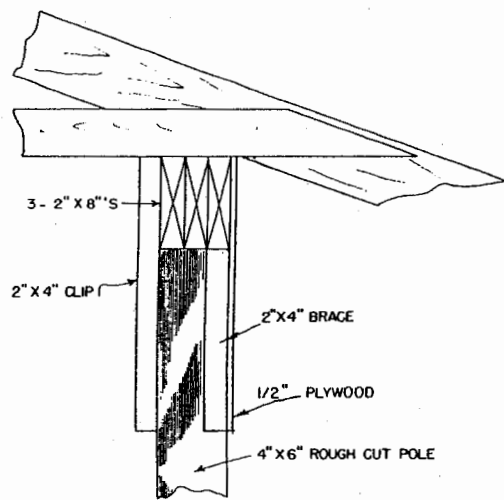


QUARTER POLE TOP

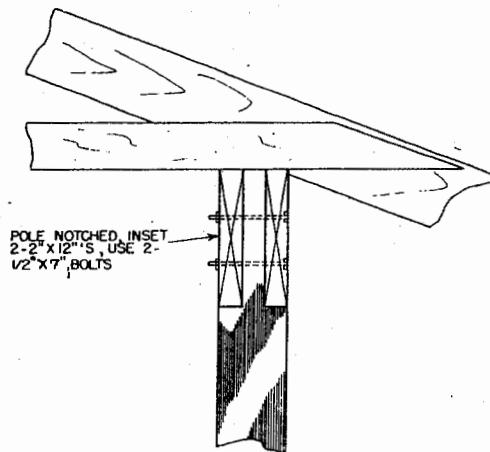


ALTERNATE
QUARTER POLE TOP





ALL SCALES THIS SHEET, 1 1/2" = 1'-0"
UNLESS OTHERWISE NOTED.

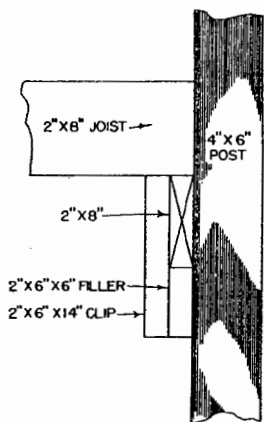


QUARTER SUPPORT

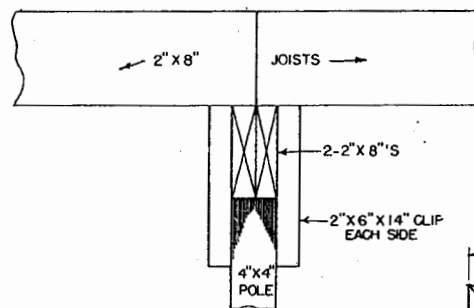


CENTER SUPPORT

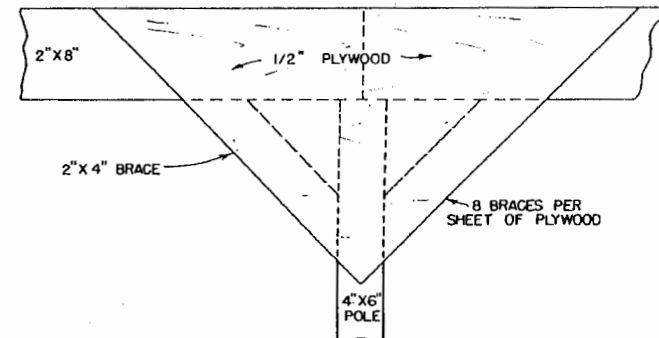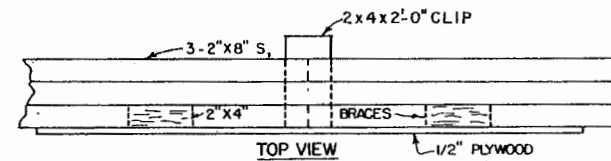

SIDE VIEW
PLYWOOD BRACE SYSTEM

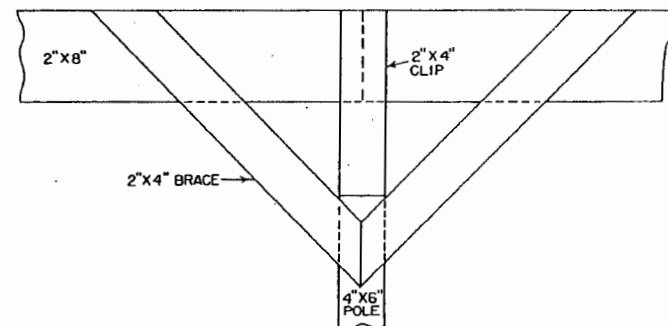

ALTERNATE BRACE SYSTEM

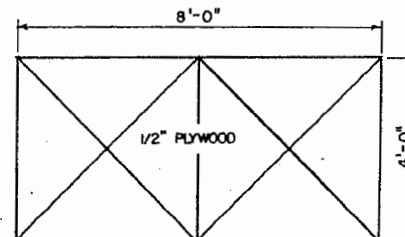

CUTTING DIAGRAM
FOR BRACES
SCALE: 1/2" = 1'-0"
12 9 6 3 0 1



BROILER BREEDER HOUSE
DEEP PIT

VA. '75 6235 SHEET 3 OF 3

Disclaimer

This site makes available conceptual plans that can be helpful in developing building layouts and selecting equipment for various agricultural applications. These plans do not necessarily represent the most current technology or construction codes. They are not construction plans and do not replace the need for competent design assistance in developing safe, legal and well-functioning agricultural building system. The LSU Agriculture Center, the Mid-West Plan Service, the United States Department of Agriculture and none of the cooperating land-grant universities warranty these plans.